

**SAMSUNG**

## **3 DVD MINI COMPONENT SYSTEM**

DVD/VCD/CD/MP3-CD/CD-R/RW  
PLAYBACK


THIS APPLIANCE IS MANUFACTURED BY:

MAX-DS18500

### **Instruction Manual**

**SAMSUNG**

**ELECTRONICS**

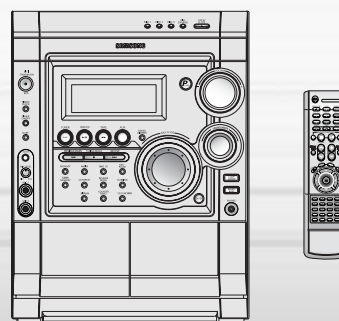

AH68-01607E



## Safety Warnings

CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUCT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
PRODUCTO LASER CLASE 1



### CAUTION

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN.



**CAUTION:**  
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.


**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

(Saudi Arabian Standards Organisation)


THIS APPLIANCE IS FITTED WITH 220V SASO APPROVED PLUG.THE CUSTOMER IS ENTITLED TO A FREE SASO APPROVED 127V PLUG FROM THE LOCAL DEALER.




## Precautions

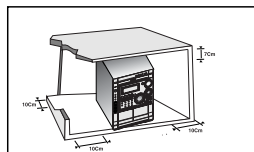


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3-4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

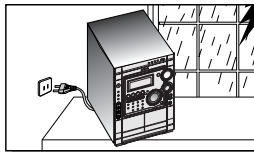


During thunderstorms, disconnect AC main plug from the wall outlet.  
Voltage peaks due to lightning could damage the unit.

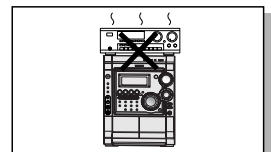

Do not expose the unit to direct sunlight or other heat sources.  
This could lead to overheating and malfunction of the unit.

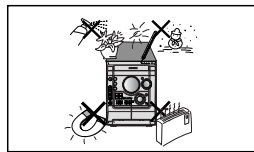

Protect the player from moisture (e.g. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (e.g. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only. Condensation may occur if your player or disc have been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

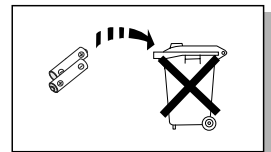

The battery used with this product contain chemicals that are harmful to the environment.  
Do not dispose of batteries in the general household trash.

## Features

### ● Multi-Disc Playback & AM/FM Tuner, TAPE

The MAX-DS18500 combines the convenience of multi-disc playback capability, including DVD-VIDEO, DVD-AUDIO, CD, MP3-CD, CD-R, CD-RW, VCD, DivX, JPEG and DVD-R/RW, with a sophisticated AM/FM tuner, TAPE, all in a single player.

### ● TV Screen Saver Function

The MAX-DS18500 automatically brightens and darkens the brightness of the TV screen after 3 minutes in the stop mode.  
The MAX-DS18500 automatically switches itself into the power saving mode after 20 minutes in the screen saver mode.

### ● Power Saving Function

The MAX-DS18500 automatically shuts itself off after 20 minutes in the stop mode.

### ● Customized TV Screen Display

The MAX-DS18500 allows you to select your favorite image during JPEG, VCD/DVD playback and set it as your background wallpaper.



**DVD (Digital Versatile Disc)** offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.  
The Region Number for this player is given on the rear panel of the player.  
(Your DVD player will only play DVDs that are labeled with identical region codes.)

## Copy Protection

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


## Contents

<b>● PREPARATION</b>	
Safety Warnings	1
Precautions	2
Features	3
Description	5
<b>● CONNECTIONS</b>	
Connecting the Speakers	9
Connecting to a TV	11
P.SCAN(Progressive Scan) Function	12
Connecting External Components	13
Connecting the FM/AM and SW(option) Antennas	14
Setting the Clock	15
<b>● OPERATION</b>	
Disc Playback	16
Bonus Group/Navigating pages	18
DivX Playback	19
Displaying Disc Information	21
Fast/Slow Playback	22
Skipping Scenes/Songs	23
Angle Function	24
Repeat Playback	25
A-B Repeat playback	27
Zoom Function	28
Selecting Audio/Subtitle Language	29
Moving Directly to a Scene/Song	30
JPEG File Playback	31
Using Disc Menu	33
Using the Title Menu	34
<b>● SETUP</b>	
Setting the Language	35
Setting TV Screen type	37
Setting Parental Controls (Rating Level)	39
Setting the Password	40
Setting the Wallpaper	41
DVD Playback Mode	43
AV SYNC Setup	44
Setting the Speaker Mode	45
Setting the Test Tone	46
Setting the Delay time	47
Setting the Audio Quality	49
Setting the DRC (Dynamic Range Compression)	51
Dolby Pro Logic II Mode	53
Dolby Pro Logic II Effect	54
<b>● RADIO OPERATION</b>	
Listening to Radio	55
Presetting Stations	56
<b>● TAPE DECK</b>	
Listening to a Cassette	57
<b>● MISCELLANEOUS</b>	
Recording a Compact Disc	60
Recording a Radio Program	62
Timer Function	63
Canceling the Timer	64
P.SOUND/SOUND MODE Function	65
Sleep Timer Function / Mute Function	66
DEMO Function / DIMMER Function/ECO Function	67
MAXX BASS LEVEL Function/SUB WOOFER LEVEL Function	68
Connecting Headphones/Microphone(option)	69
Cautions on Handling and Storing Discs	70
Before Calling for Service	71
Notes on Discs	73
Notes on Terminology	74
Specifications	75




## Description

### —Front Panel—

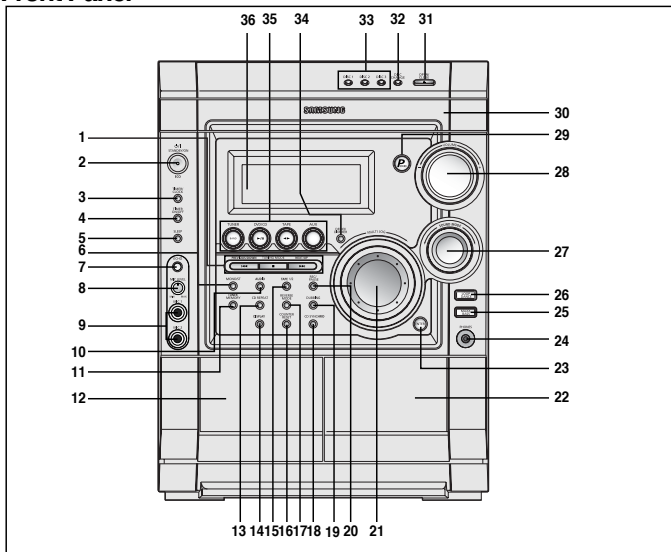


1. Search Function buttons  
Tuning Mode or Stop button
2. STANDBY/ON/ECO
3. Timer/Clock
4. Timer On/Off
5. Sleep
6. FM Mono/Stereo
7. Echo
8. MIC Level
9. MIC1, MIC2
10. Audio
11. Tuner Memory
12. Cassette Deck 1
13. CD Repeat
14. Display
15. Tape 1/2
16. Tape Counter Reset
17. Tape Reverse Mode
18. CD Synchro Recording
19. Tape Normal Speed Dubbing
20. Record/Pause (PAL/NTSC)
21. Multi Jog
22. Cassette Deck 2
23. Enter
24. Headphone Jack Connector
25. MAXX Bass
26. Loop Dance
27. Sound Mode
28. Volume
29. Power Sound
30. Compact Disc Compartment
31. Open/Close
32. Disc Change
33. Disc Selection buttons
34. Demo/Dimmer
35. Function Selection buttons
36. Window Display

### —Rear Panel—

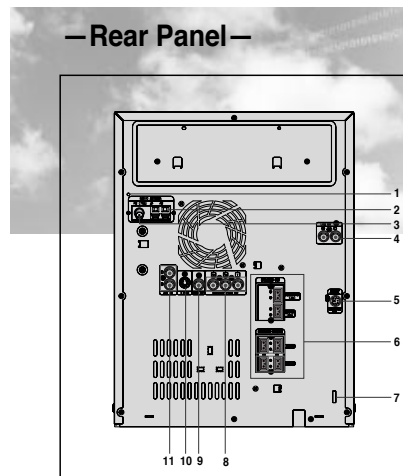

1. SW Antenna Connector (Option)
2. AM Antenna Connectors
3. FM Antenna Connector
4. LINE OUT
5. Sub woofer Control Jack
6. 5.1 Channel Speaker Output Terminals
7. Voltage Selector (Option)
8. Component Video Output Connectors  
Connect a TV with component vide input jacks to these jacks.
9. Video Output Connector  
Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
10. S-Video Output Connector  
If the TV is equipped with an S-Video input connector (S-VIDEO IN), connect it to the player's S-Video output jack.
11. AUX-In

### Accessories

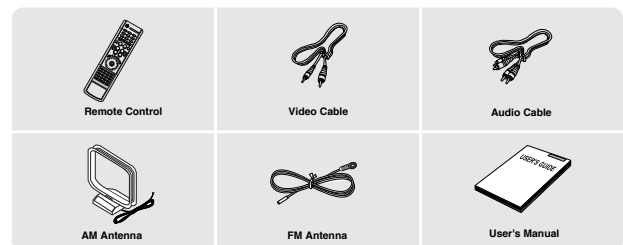






## Description

### —Remote Control—

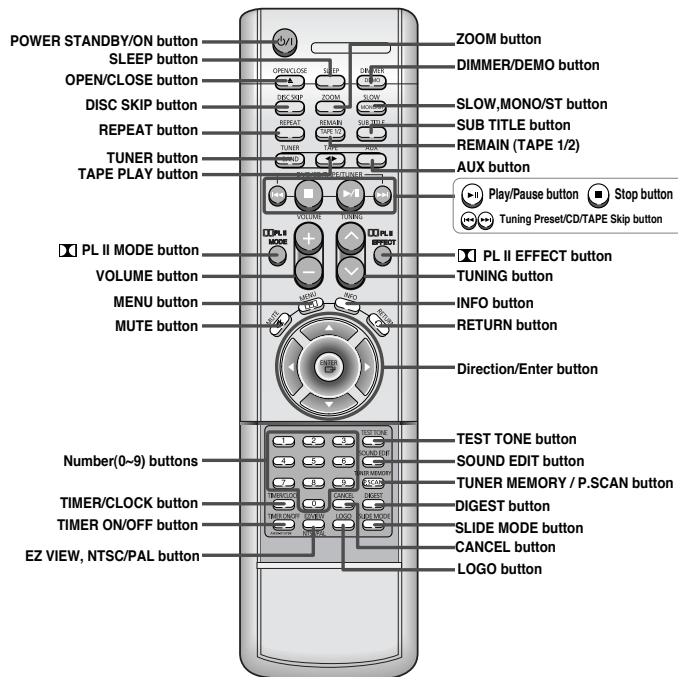

### Insert Remote Batteries

- 1 Remove the battery cover on the back of the remote by pressing down and sliding the cover in the direction of the arrow.
- 2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).
- 3 Replace the battery cover.

#### Caution

Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity:(+) to (+)and (-)to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

### Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.




To open the remote control cover, push the top of the cover, then slide downward.





## Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

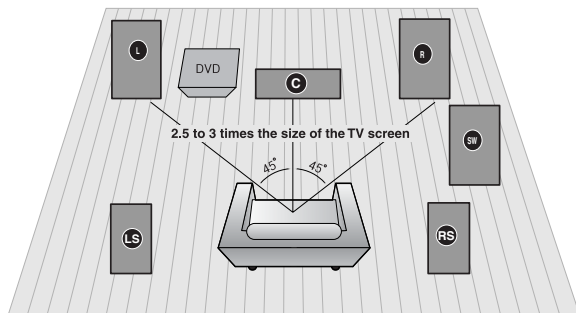

### Position of the DVD Player

- Place it on a stand or cabinet shelf, or under the TV stand.

### Front Speakers **L R**

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

### Center Speaker **C**

- It is best to install it at the same height as the front speakers.
- You can also install it directly over or under the TV.

### Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV. Example: For 32" TVs 2-2.4m (6-8feet)  
For 55" TVs 3.5-4m (11-13feet)

### Rear Speakers **LS RS**


- Place these speakers behind your listening position.
- If there isn't enough room, place these speakers to face each other.
- Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.

\* Unlike the front and center speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.

### Subwoofer **SW**

- The position of the subwoofer is not so critical. Place it anywhere you like.
- Usually, it is placed by a corner near the front speakers.


## CONNECTIONS

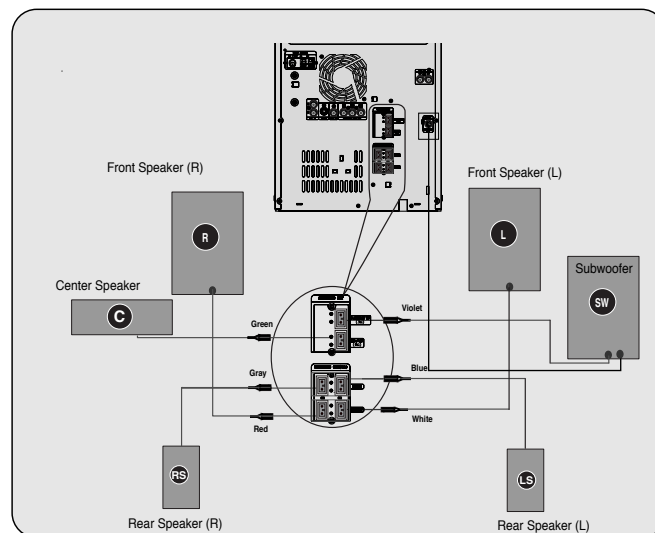

### Back of the Main Unit

Connect the connecting jacks to the back of the DVD player.

- Make sure the colors of the speaker terminals match the colors of the connecting jacks.

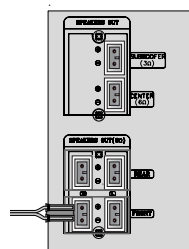




## Connecting to a TV

Please be sure to turn off the power and unplug the power cord before moving or installing this unit.  
Please choose one of three video connection methods.

### Method 1 Using Video Out (Good Quality)


- 1 Connect Video Out on the player to Video In on your TV.
- 2 Press the TV/VIDEO button on the remote of TV control to set the TV to "VIDEO".

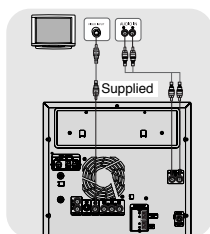

### Method 2 Using S-Video Out (Better Quality)

Use this method if your TV has an S-Video In jack.

- 1 Connect S-Video Out to S-Video In on your TV.
- 2 Press the TV/VIDEO button on the remote control of TV to set the TV to "S-VIDEO".

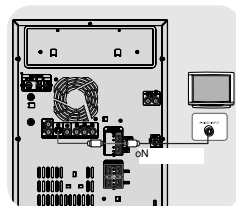

### Method 3

Use this method if your TV have Pr,Pb and Y jacks.

If you television is equipped with Component Video inputs, connect a component video cable from the Pr,Pb and Y jacks on the back panel of the system to the corresponding jacks on your television.

#### Note

- Composite Video: A single video signal that is a composite of the black-and-white information (Y) and the color information (C).
- S-Video: A video transmission standard that provides a sharper, brighter picture than ordinary composite video by separating brightness and color signals.





## P.SCAN (Progressive Scan) Function

Unlike regular Interlace Scan, in which two fields of picture information alternate to create the entire picture (odd scan lines, then even scan lines), Progressive Scan uses one field of information (all lines displayed in one pass) to create a clear and detailed picture without visible scan lines.

**Press and hold P.SCAN button on the remote controller for over 5 seconds in STOP mode.**

- Pressing and holding the button for over 5 seconds will select "Progressive Scan" and "Interlace Scan" repetitively.

### What is Progressive (or Non-Interlaced) Scanning?

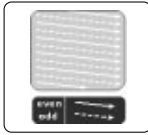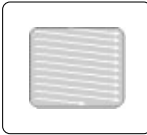Interlaced Scan (1 FRAME = 2 FIELDS)	Progressive Scan (FULL FRAME)
 <p>In interlaced-scan video, a frame consists of two interlaced fields (odd and even), where each field contains every other horizontal line in the frame. The odd field of alternating lines is displayed first, and then the even field is displayed to fill in the alternating gaps left by the odd field to form a single frame. One frame, displayed every 1/30th of a second, contains two interlaced fields, thus a total of 60 fields are displayed every 1/60th of a second. The interlaced scanning method is intended for capturing a still object.</p>	 <p>The progressive scanning method scans one full frame of video consecutively down the screen, line by line. An entire image is drawn at one time, as opposed to the interlaced scanning process by which a video image is drawn in a series of passes. The progressive scanning method is desirable for dealing with moving objects.</p>

#### Note

- This function works only on TVs equipped with component video inputs (Y, Pr, Pb) that support Progressive Video. (It does not work on TVs with conventional component inputs, i.e., non-progressive scan TVs.)
- Depending on the brand and model of your TV, this function may not work.

### Selecting the Video Format


Turn off the main unit and then press **NTSC/PAL** on the Remote Control or **REC/PAUSE** on the Main Unit.

- By default, the video format is set to "PAL".
- Each time the button is pressed, the video format switches between "NTSC" and "PAL".
- Each country has a different video format standard.
- For normal playback, the video format of the disc must be the same as the video format of your TV.

## Connecting External Components


### Connecting an External Analog Component

Example: Analog signal components such as a VCR, Camcorder, and TV.

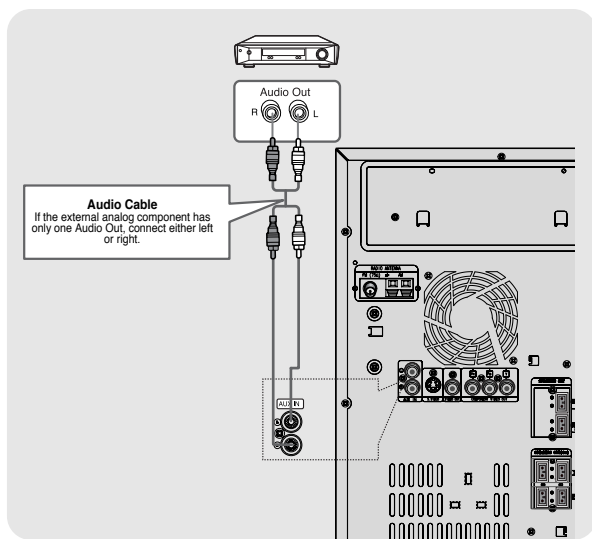

- 1 Connect Audio In on the DVD player to Audio Out on the external analog component.  
• Be sure to match connector colors.
- 2 Press **AUX** to select AUX.  
• 'AUX' appears in the display.

## Connecting the FM, AM(MW) and SW(option) Antennas

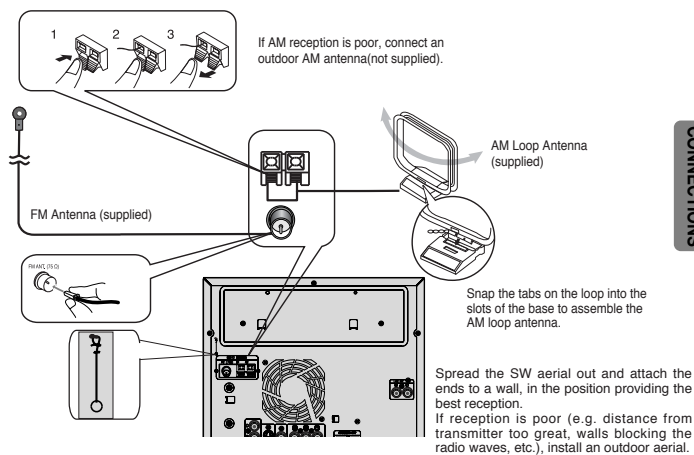


### FM antenna connection

1. Connect the FM antenna supplied to the FM 75Ω COAXIAL terminal as a temporary measure.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

• If reception is poor, connect an outdoor antenna. Before attaching a 75Ω coaxial cable (with a standard type connector), disconnect the supplied FM antenna.

### Cooling Fan

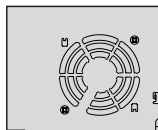

The cooling fan dissipates the heat generated inside the unit so that the unit can be operated normally. The cooling fan is activated automatically to supply cool air to the unit.

Please observe the following cautions for your safety.

- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit could rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

### AM (MW) antenna connection

1. Connect the AM loop antenna supplied to the AM and MW terminals.
2. If reception is poor, connect an outdoor single vinyl-covered wire to the AM terminal. (Keep the AM loop antenna connected).

## Setting the Clock

For each step, you have a few seconds to set the required options.  
If you exceed this time, you must start again.

**1** Switch the system on by pressing **POWER** button.

**2** Press **TIMER/CLOCK** twice.

- **CLOCK** is displayed.

**3** Press **ENTER**.  
The hour flashes.

- Increase the hours : ►
- Decrease the hours : ◀

### Note

- You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.

**4** When the correct hour is displayed, press **ENTER**.  
The minutes flash.

- Increase the minutes : ►
- Decrease the minutes : ◀

**5** When the correct time is displayed, press **ENTER**.

- **"TIMER"** appears in the display.
- The current time is now set.

### Note


You can also use Multi-Jog or ◀▶▶▶▶ button on the panel front instead of ◀ ▶ buttons in step 3,4.

## Checking the Remaining Time

Press the **REMAIN** button.

- For checking the total and remaining time of a title or chapter being played.

Each time the **REMAIN** button is pressed

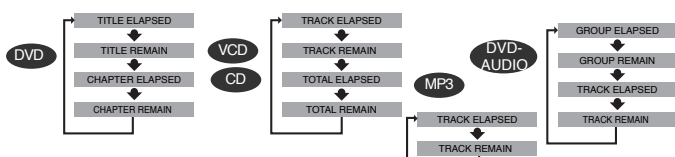

## Disc Playback

### Selecting a CD in the Disc changer

The **CD** function is automatically selected when Disc Skip is pushed.  
To select a specific disc, press the corresponding **DISC** (1, 2, 3) button on the front panel or **DISC SKIP** on the remote control, until the required disc indicator flashes.  
Result: All the discs will be played in turn, starting with the one selected.

- If you use the **DISC** (1, 2, 3) function when listening to the radio or to a tape, the system switches automatically to the CD mode.
- If the disc selected is not loaded, the next disc is played automatically.

### OPERATION

**DVD DVD-AUDIO VCD CD**

- Playback starts automatically.

**MP3 JPEG DivX**

- Playback starts automatically.
- If the TV is on, a list of MP3s on the CD will appear on the TV screen.



### Note

- Depending on the content of the disc, the initial screen may appear different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- Table of contents of a MP3-CD varies depending on the MP3 track format recorded on the disc.

To stop playback, press **STOP** during playback.

- If pressed once, **"PRESS PLAY"** is displayed and the stop position will be stored in memory. If **PLAY/PAUSE** (▶/||) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, **"STOP"** is displayed, and if **PLAY/PAUSE** (▶/||) button is pressed, playback starts from the beginning.

 
To temporarily pause playback, press **PLAY/PAUSE** during playback.

- To resume playback, press **PLAY/PAUSE** button again.

## Disc terminology


### Groups and tracks (DVD-AUDIO)

- DVD-audios are divided into several large sections called "groups" and smaller sections called "tracks". Numbers are allotted to these sections. These numbers are called "group numbers" and "track numbers".




### Titles and chapters (DVD-VIDEO)

 
- DVD-videos are divided into several large sections called "titles" and smaller sections called "chapters". Numbers are allotted to these sections. These numbers are called "title numbers" and "chapter numbers".



### Tracks (Video and music CDs)

 - Video and music CDs are divided into sections called "tracks". Numbers are allotted to these sections. These numbers are called "track numbers".



- Note**
- In this manual, the instructions marked with "DVD (  )" are applicable to DVD-VIDEO, DVD-AUDIO, and DVD-R/RW discs.
  - Where a particular DVD type is mentioned, it is indicated separately.
  - Depending on the content of the disc, the initial screen may appear different.



## Bonus Group / Navigating Pages



### Bonus Group



Some DVD-Audio discs have an extra 'bonus' group that requires a 4-digit key number to access. See the disc packaging for details and the key number.

When you play a DVD-Audio disc that has a bonus group, the key number input screen appears automatically.




#### Note

- If you eject the disc, switch the power off, or unplug the player, you will need to re-enter the key number.



### Navigating Pages



During playback, press the  button on the remote control.

- You can select the desired image from a DVD-Audio disc containing still images.
- With some discs, you may not be able to select images depending on how the disc was manufactured.



## DivX Playback

### Skip Forward/Back


During playback, press the **⏮️⏭️** button.

- Go to the next file whenever you press **⏭️** button, if there are over 2 files in the disk.
- Go to the previous file whenever you press **⏮️** button, if there are over 2 files in the disk.

### Fast playback

Press and hold **⏮️⏭️** button.

- Each time the button is held down during playback, the playback speed changes as follows:

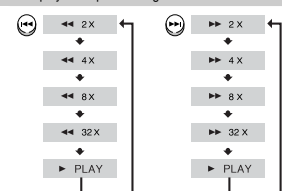


### Zoom Function

**1** Press **ZOOM** button.

- Each time you press the button, your selection will toggle between "ZOOM X2" and "ZOOM OFF".

**2** Press Cursor **▲, ▼, ◀, ▶** buttons to move to the area you want to enlarge.

**Note** • DivX files can be played in Zoom X2 mode only.

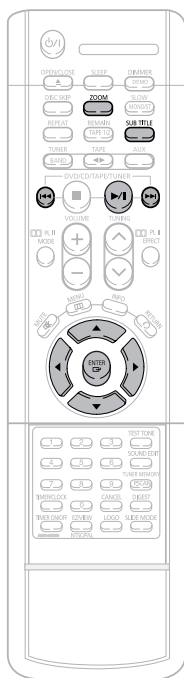

### 5 Minute Skip function

During playback, press the **◀, ▶** button.

- Go to the screen about 5 minutes after whenever you press **▶** button.
- Go to the screen about 5 minutes earlier whenever you press **◀** button.

### Subtitle Display

Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between "SUBTITLE ON" and "SUBTITLE OFF".
- If the disc has only one subtitle file, it will be played automatically.
- Up to 8 subtitle languages are supported.

OPERATION

#### DivX Feature Table

##### DivX Supported

Avi files are used to contain the audio and video data; these must be stored on CD in the ISO 9660 format.

		SPEC
VIDEO Compatibility	DivX3.11	Up to the latest VERSION
	WMV	WMV V1/V2/V3/V7
AUDIO Compatibility	MP3	CBR : 80kbps~384kbps
	AC3	CBR : 128kbps~384kbps
	WMA	CBR : 56kbps~128kbps

**MPEGs containing DivX can be divided into Video and Audio.**

- **Video compatibility** : All versions of DivX later than 3.11 (including the latest 5.1) are supported. In addition, XviD is supported. For WMV, V1, V2, V3, and V7 formats are possible. The initial resolution is 720X480 and may support up to 720X576.
- **Audio compatibility** : MP3s encoded at bitrates from 80kbps to 384kbps, AC3s from 128kbps to 384kbps, and WMAs from 56kbps to 128kbps are supported.
- In addition, for subtitles, this unit will support Text format (SMI).

##### Note


- When playing the DivX disk, you can play the file with extension of AVI only.
- Among the available DivX audio formats, DTS Audio is not supported.
- WMV V8 is not supported for WMV files.
- When burning a subtitle file to a CD-ROM with your PC, be sure to burn it as an SMI file.
- DivX Disc does not playing when its sampling frequency is lower than 32KHz.
- Some of the discs recorded in DivX or XviD depending on the way of recording could be played back not correctly or couldn't be played back at all.
- MP3 file support: MPEG1 LAYER3 (BITRATE : 128KBPS~320KBPS, SAMPLING FREQ.: 32K/44.1K/48KHz).

## Displaying Disc Information

You can view playback information on the disc on the TV screen.

Press **INFO** button on the remote control or Press **DISPLAY** button on the main set .

- Each time the button is pressed, the display changes as follows:

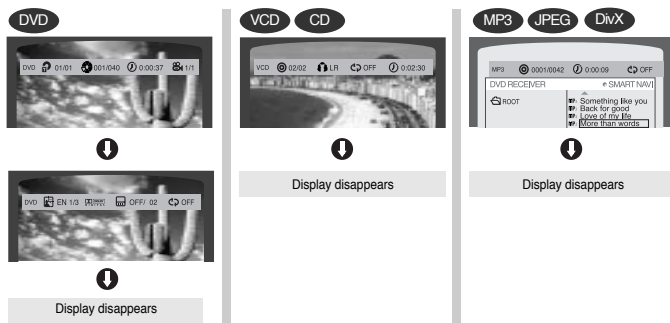

### Note

- Depending on the disc, the disc information display may appear different.
- Depending on the disc, you can also select DOLBY DIGITAL, or PRO LOGIC.

- What is a Title?**  
A movie contained in a DVD disc.
- What is a Chapter?**  
Each title on a DVD disc is divided into several smaller sections called "chapters".
- appears on the TV screen!**  
If this symbol appears on the TV screen while buttons are being operated, that operation is not possible with the disc currently being played.
- What is a Track (File)?**  
A section of video or a music file recorded on a VCD, CD, or MP3-CD.

### Screen Display


DVD	DVD display	MP3	MP3 CD display	TRACK (FILE) display	AUDIO LANGUAGE display	DOLBY DIGITAL display
VCD	VCD display	TITLE display	TRACK (FILE) display	SUBTITLE display	ANGLE display	
CD	CD display	REPEAT PLAYBACK display	GROUP display	LR STEREO (L/R) display	DivX display	
DVD-AUDIO	DVD-AUDIO display	CHAPTER display				

## Fast/Slow Playback

### Fast Playback DVD VCD CD MP3

Press and hold **2X** button.

- Each time the button is held down during playback, the playback speed changes as follows:

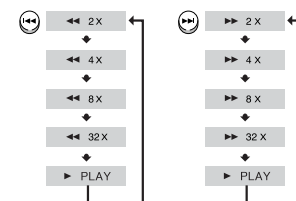


OPERATION

### Slow Playback

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

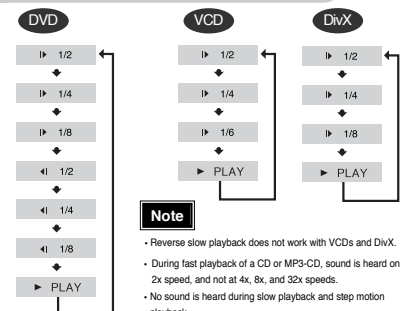

### Note

- Reverse slow playback does not work with VCDs and DivX.
- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.
- No sound is heard during slow playback and step motion playback.





## Skip Scenes/Songs

DVD VCD MP3

 
Briefly press **⏮** or **⏭**.

- Each time the button is pressed briefly during playback, the previous or next chapter, track, or directory (file) will be played.
- But, you cannot skip chapters consecutively.

DVD



VCD



MP3



- When watching a VCD with a track longer than 15 minutes, each time **⏮** or **⏭** is pressed, playback will skip back or forward 5 minutes.



## Angle Function

This function allows you to view the same scene in different angles.

DVD

1 Press **INFO** button.



 
2 Press **Cursor** **▶** button to move to **ANGLE** display.



OPERATION

3 Press **Cursor** **▲**, **▼** buttons or numeric buttons to select the desired angle.

- Each time the button is pressed, the angle changes as follows:



**Note** • The Angle function works only with discs on which multiple angles have been recorded.




# Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

DVD VCD CD MP3 JPEG

Press **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

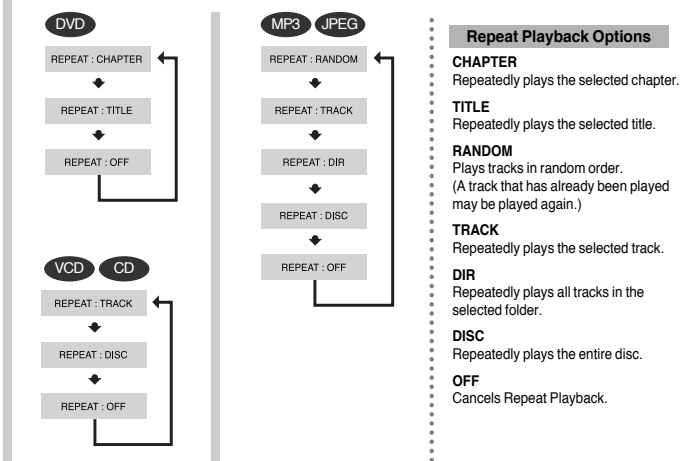

## Note

- Repeat playback operation is not possible with version 2.0 VCD discs if PBC is turned on.  
To use Repeat Playback on a VCD with PBC, you should set the PBC to OFF in the disc menu. (See page 33.)

DVD VCD CD

## To Select a Repeat Playback Mode in the Disc Information Screen

**1** Press **INFO** button twice.


- For a VCD or CD, Press INFO button once.

DVD EN 1/3 PBC OFF 02 OFF

**2** Press Cursor **▶** button to move to REPEAT PLAYBACK display.


DVD EN 1/3 PBC OFF 02 OFF

**3** Press Cursor **▼** button to select the desired Repeat Playback mode.

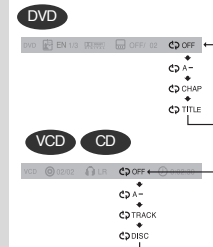

## Note

- For MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.
- For VCD Version 2.0 discs, you can select Repeat Play in PBC off mode.

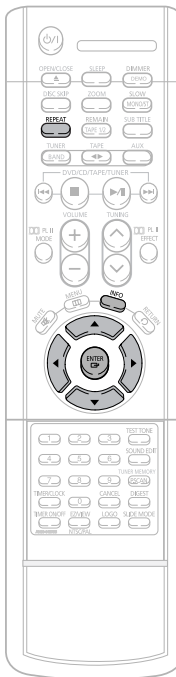

## A↔B Repeat Playback

DVD VCD CD

### 1 Press INFO button twice.

- For a VCD or CD, press **INFO** button once.

DVD EN 1/3 REW OFF/02 OFF

### 2 Press Cursor button to move to REPEAT PLAYBACK (↻) display.

DVD EN 1/3 REW OFF/02 OFF

### 3 Press Cursor ▲, ▼ buttons to select 'A-' and then press ENTER button at the beginning of the desired segment.

- When **ENTER** button is pressed, the selected position will be stored in memory.

DVD EN 1/3 REW OFF/02 A-



DVD EN 1/3 REW OFF/02 A-1

REPEAT : A-

### 4 Press ENTER button at the end of the desired segment.

- The specified segment will be played repeatedly.


DVD EN 1/3 REW OFF/02 A-B

REPEAT : A-B

To return to normal playback, press Cursor ▲, buttons to select OFF.

#### Note

- The A-B Repeat function will not work on an MP3 or JPEG disc.

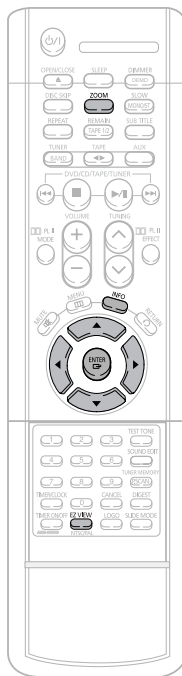


## Zoom Function

This function allows you to enlarge a particular area of the displayed image.

### Zoom (Screen Enlarge) Function

DVD VCD

### 1 Press ZOOM button.

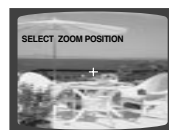


### 2 Press Cursor ▲, ▼, ◀, ▶ buttons to move to the area you want to enlarge.



### 3 Press ENTER button.

 - Each time the button is pressed, the zoom level changes as follows:



OPERATION

### Aspect Ratio

DVD

Press **EZ VIEW** button.

- Each time the button is pressed, the zoom function will switch between On and Off.
- When a movie is played in Wide screen format, black bars at the top and bottom of the TV screen can be removed by pressing the **EZ VIEW** button.



#### Note

- This function will not work if the DVD is recorded with multi-camera angle format.
- Black bars may not disappear because some DVD discs have a built-in horizontal to vertical ratio.

## Selecting Audio Subtitle Language

### Audio Language Selection Function DVD

**1** Press **INFO** button twice.

DVD EN 1/3 SP 2/3 OFF 02 OFF

**2** Press Cursor **▲**, **▼** buttons or numeric buttons to select the desired audio language.

• Depending on the number of languages on a DVD disc, a different audio language (ENGLISH, SPAIN, JAPANESE, etc.) is selected each time the button is pressed.

EN 1/3 SP 2/3 OFF 02 OFF

### Subtitle Language Selection Function DVD

**1** Press **INFO** button twice.

DVD EN 1/3 SP 2/3 OFF 02 OFF

**2** Press Cursor **▶** button to move to **SUBTITLE** display.


DVD EN 1/3 SP 2/3 OFF 02 OFF

**3** Press Cursor **▼** button or numeric buttons to select the desired subtitle.

DVD EN 1/3 SP 2/3 OFF 02 OFF

#### Note

- You can use the SUBTITLE button on the remote control to select a subtitle language.
- Depending on the disc, the Subtitle and Audio Language functions may not work.

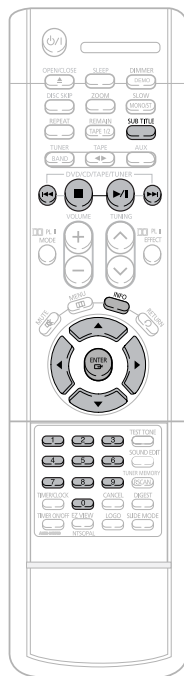

## Moving Directly to a Scene/Song

DVD VCD CD

**1** Press **INFO** button.

DVD 01:05 001:040 0:00:37 01/11

### Moving to a Title/Track

**2** Press Cursor **▲**, **▼** buttons or numeric buttons to select the desired title/track and then press **ENTER** button.

DVD 03:05 003:002 0:00:01 01/11

### Moving to a Chapter

**3** Press Cursor **◀**, **▶** buttons to move to Chapter display.

DVD 03:05 003:040 0:00:01 01/11

### Moving to a Chapter

**4** Press Cursor **▲**, **▼** buttons or numeric buttons to select the desired chapter and then press **ENTER** button.

DVD 03:05 003:040 0:00:01 01/11

### Moving to a Specific Time

**5** Press Cursor **◀**, **▶** buttons to move to time display.

DVD 03:05 003:040 0:17:30 01/11

### Moving to a Specific Time

**6** Press the numeric buttons to select the desired time and then press **ENTER** button.

DVD 03:05 003:040 0:13:00 01/11

MP3 JPEG

Press the numeric buttons.

- The selected file will be played.
- An MP3 or JPEG disc cannot be moved from the disc information screen.
- When playing an MP3 or JPEG disc, you cannot use **▲**, **▼** to move a folder. To move a folder, press **■** (Stop) and then press **▲**, **▼**.



#### Note

- You can press **◀◀▶▶** on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.

OPERATION



## JPEG File Playback

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this DVD player.


### Slide Mode

1 Place the JPEG disc on the disc tray.

2 Press the **OPEN/CLOSE** button.


3 Press **SLIDE MODE** button.

- Playback starts automatically.
- Each time the button is pressed, the image makes the transition as follows:

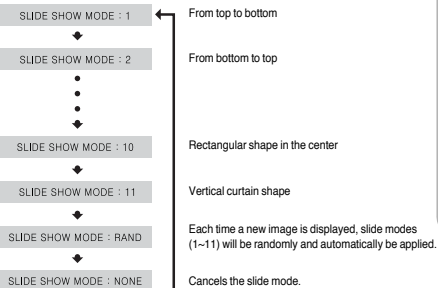

Press **◀◀▶▶** to skip to the next slide.

- Each time the button is pressed, the slide moves backward or forward.

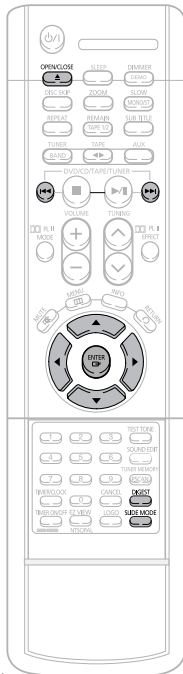

### Digest Function


You can view 9 JPEG images on the TV screen.

1 Press **DIGEST** button during playback.

- JPEG files will be shown in 9 windows.




2 Press Cursor **▲, ▼, ◀, ▶** buttons to select the desired image and then press **ENTER** button.

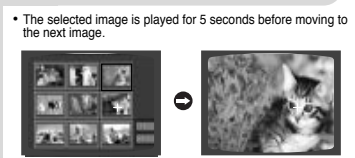

To view the previous or next image with 9 windows, press **◀◀▶▶**.

### Rotate/Flip Function

Press Cursor **▲, ▼, ◀, ▶** buttons during playback.

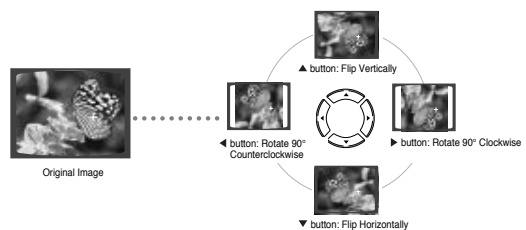



## Using Disc Menu

You can use the menus for the audio language, subtitle language, profile, etc.  
DVD menu contents differ from disc to disc.

DVD

**1** In stop mode, Press **MENU** button.

- When playing a VCD (version 2.0), this toggles between PBC ON and OFF.



**2** Press Cursor **▲, ▼** buttons to move to 'DISC MENU' and then press **ENTER** button.


- When you select the disc menu that is not supported by the disc, the "This menu is not supported" message appears on the screen.



**3** Press Cursor **▲, ▼, ◀, ▶** buttons to select the desired item.



**4** Press **ENTER** button.

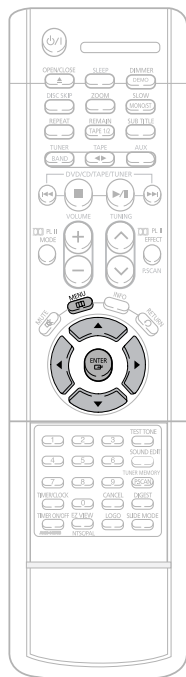


### Note

#### PBC (Playback Control) Function

When playing a VCD (version 2.0), you can select and view various scenes according to the menu screen.

**PBC ON:** This VCD disc is version 2.0. The disc is played back according to the menu screen. Some functions may be disabled. When some functions are disabled, select "PBC OFF" to enable them.

**PBC OFF:** This VCD disc is version 1.1. The disc is played back in the same way as with a music CD.

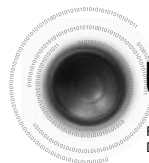

## Using the Title Menu

For DVDs containing multiple titles, you can view the title of each movie.  
Depending on the disc, this function may either not work at all or may work differently.

DVD

**1** In stop mode Press **MENU** button.



**2** Press Cursor **▲, ▼** button to move to 'Title Menu'.



**3** Press **ENTER** button.

- The title menu appears.



Press **MENU** button to exit the setup screen.

OPERATION

# Code List

the initial settings "Disc Audio", "Disc Subtitle"

Code	Language	Code	Language
1334	Latvian, Lettish	1506	Slovenian
1345	Malagasy	1507	Samoaan
1347	Maori	1508	Shona
1349	Macedonian	1509	Somali
1350	Malayalam	1511	Albanian
1352	Mongolian	1512	Serbian
1353	Moldavian	1513	Siswati
1356	Marathi	1514	Sesotho
1357	Malay	1515	Sundanese
1358	Maltese	1516	Swedish
1363	Burmese	1517	Swahili
1365	Nauru	1521	Tamil
1369	Nepali	1525	Tegulu
1376	Dutch	1527	Tajik
1379	Norwegian	1528	Thai
1393	Occitan	1529	Tigrinya
1403	(Afan) Oromo	1531	Turkmen
1408	Oriya	1532	Tagalog
1417	Punjabi	1534	Setswana
1428	Polish	1535	Tonga
1435	Pashito, Pushto	1538	Turkish
1436	Portuguese	1539	Tsonga
1463	Quechua	1540	Tatar
1481	Rhaeto-Romance	1543	Twi
1482	Kirundi	1557	Ukrainian
1483	Romanian	1564	Urdu
1489	Russian	1572	Uzbek
1491	Kinyarwanda	1581	Vietnamese
1495	Sanskrit	1587	Volapuk
1498	Sindhi	1613	Wolof
1501	Sangro	1632	Xhosa
1502	Serbo-Croatian	1665	Yoruba
1503	Singhalese	1684	Chinese
1505	Slovak	1697	Zulu

SETUP

## Screen Size)

tional TVs is 4:3, while that of wide screen and high ratio. When playing DVDs recorded in different your TV or monitor.

Select either "4:3LB" or "4:3PS" option according to Select "16:9" if you have a wide screen TV.

picture in the full-screen  
n TV.  
n aspect.



picture in the letter box  
V.  
top and bottom of the screen.



picture in the pan & scan  
V.  
n of the screen only (with the  
f).



SETUP

t in wide screen.  
ge formats, they will look different depending on  
ect ratio setting.



# password

rental (rating level) setting.

Cursor ▼  
to move to  
and then  
ENTER button.



3 Press Cursor ▼ button to  
move to 'PASSWORD'  
and then press ENTER  
button.



the password  
en press  
R button.

assword, a new  
confirm new password.  
complete.



previous level.

error numeric when you inputting password.

screen.

40

SETUP

Press Cursor ▼ button to move to 'LOGO' and then press ENTER button.



Press MENU button to exit the screen.

3 Press Cursor ▼ button to move to 'LOGO' and then press ENTER button.



SETUP

previous level.

en.

# Setup

If it is connected with digital TV,  
audio to optimal status to fit the video.

**2** Press Cursor **▲**, **▼** buttons  
to move to 'Audio' and then  
press **ENTER** button.

- 'Audio' menu appears.



**4** Press Cursor **▲**, **▼** buttons  
to select the Delay Time of  
AV-SYNC and then press the  
**ENTER** button.

- You can set the audio delay time between 0 ms  
and 300 ms. Set it to the optimal status.

SETUP



to the previous level.

Setup screen.

 
# Test Tone

connections and to adjust the speaker levels.

cursor ▼  
to move to  
and then  
ENTER button.

**3** Press Cursor ▼ button  
to move to 'TEST  
TONE' and then press  
ENTER button.

- The test tone will be sent to L → C →  
R → RS → LS → SW in that order.  
If the ENTER button is pressed again  
at this time, the test tone will stop.




previous level.

een.

SETUP



Continues to  
next page

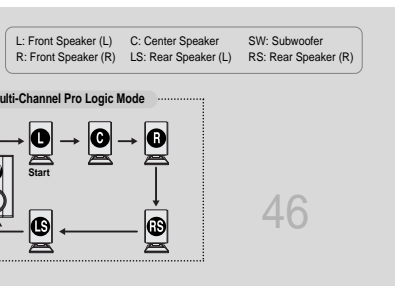


Cursor ▲, ▼, ←, →, to move  
red  
and then  
ENTER button.

**5** Press Cursor ▲, ▼, ←, →  
to set the Delay  
time.

- You can set the delay time for C  
between 00 and 05mSEC and for  
LS and RS between 00 and  
15mSEC.



SETUP

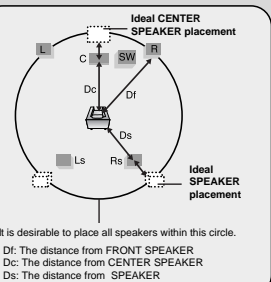

EDIT button

Speaker Balance

**SOUND**  
button and  
press Cursor  
.

- |

Adjusting Center Speaker Level

**3** Press **SOUND**  
**EDIT** button and  
then press Cursor  
◀, ▶.

CEN + |

Subwoofer Speaker Level

**SOUND**  
button and  
press Cursor

+ |

SETUP

-6dB.  
quieter as you get closer to -6dB.

50

## 4 Press Cursor ▲,▼ to adjust the 'DRC'.

- The Cursor ▲ button is pressed, the greater the effect, and the Cursor ▼ button is pressed, the smaller the effect.






SETUP

previous level.

screen.




# Logic II Effect

Logic MUSIC mode.

**2** Press  **PL II EFFECT** button and then press Cursor ,  buttons to select the mode.

- You can select either 0 or 1.

PANOR 1

**4** Press  **PL II EFFECT** button and then press Cursor ,  buttons to select the mode.

- You can select between 0 and 6.

DIMEN 6

SETUP

For more channels, multi-channel mode will be selected.  
Pro Logic II) button does not work.

Make sure to include the surround speakers for wall imaging.  
Use only the front left and right speakers.  
Do not use the center and subwoofer speakers from the front or rear.



# ations

 
⏮ to  
.10".

2 on page 41  
y or manually  
ation.



**3** Press the **TUNER**  
**MEMORY** button.

- "PROGRAM" flashes in the display.



**TUNER**  
button.

**MEMORY** button before  
ears from the display.  
ears from the display  
d in memory.



**6** To preset another  
station, repeat  
steps 2 to 5.

RADIO OPERATION



## Note

- When listening AM/SW , **PL II** (Dolby Pro Logic II)  
button does not work.

⏮ on the

## Payback Mode

ette playback modes which  
te automatically. .

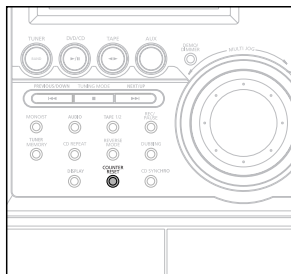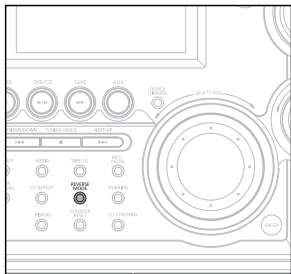


## TAPE DECK

# Compact Disc

in two different ways:

ording with the start of the disc or track of your choice

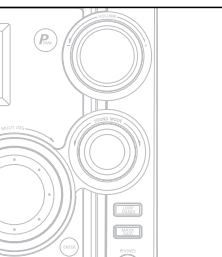

ank  
n Tape 2.

**3** Load a compact disc.

ECT button (▲) to open the CD door, insert a disc, and press the cassette

with the safety

- Press the **OPEN/CLOSE** button (▲) to open the CD door.
- Insert a CD and press the **OPEN/CLOSE** button (▲) to close the CD door.

SYNCHRO

**6** To stop recording, press ■ button.

is the button to  
om the first

**SYNCHRO** Playback of CD to  
om the first part  
layed.


## Note

- You can use **CD/SYNCHRO** button only in CD Playback Mode.
- In Recoding,DPL II doesn't work.

TAPE DECK

# Radio Program

oice.  
t has no effect on the recording.

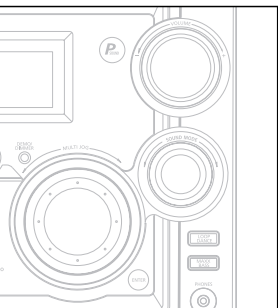

blank  
in Deck 2.

**3** Select the  
TUNER function  
by pressing  
TUNER/BAND.

EC/PAUSE)

in red and

**6** To stop recording,  
press ■ button.

## Note

- In Recoding,DPL II doesn't work.

MISCELLANEOUS

## e Timer

automatically as shown by the TIMER indication on the display.  
you must cancel it.

the timer, press **TIMER ON/OFF**

displayed.

the timer, press **TIMER ON/OFF**

again.

the timer while the power is on or while the player is in standby.



## Function / Mute Function

### o Timer Function

the time that the DVD player will shut itself off.

**SLEEP** button.

button is pressed, the selection changes as follows:  
MIN → 45 MIN → 30 MIN → 15 MIN → OFF.



sleep timer setting, press **SLEEP** button.

before the DVD player will shut itself off is displayed.  
again changes the sleep time from what you have set

sleep timer, press **SLEEP** button until  
on the display.

### Function


when answering a doorbell or telephone call.

**MUTE** button.

s in the display.  
press the button again.



## L Function/SUB WOOFER

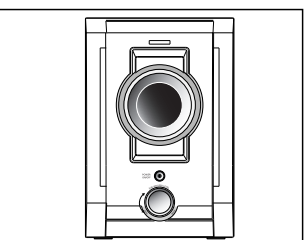

### ction

fundamental ,which creates the sensation of  
ted series of harmonics designed to simulate  
ndamental pitch. These harmonics extend the  
2 octaves below the physical speaker cutoff  
sed power consumption.MAXX BASS function  
ects.

2 You can select the level of low  
tones you desire.

### ction

OFFER OUT SYSTEM CONTROL Jack.

Turn the **SUB WOOFER  
LEVEL** knob to adjust the sub  
woofer volume.

MISCELLANEOUS

## Handling and Storing Discs

duce sound and picture quality or cause breaks in  
scratch discs when handling them.

.....  
**playback side of the disc. Hold  
edges so that fingerprints will not  
e.  
er or tape on the disc.**

.....  
**erprints or dirt on the disc, clean it  
ent diluted in water and wipe with a**

gently from the inside to the outside of the disc.


if warm air comes into contact with cold parts  
condensation forms inside the player, the player  
tly. If this occurs, remove the disc and let the  
ours with the power on.

## Cassettes

ut.  
p, remove the safety tab on the upper edge of the  
been broken, simply cover the opening with adhesive

s put it back in its case.  
sunlight, where they will not be exposed to high

necessary strain on the tape mechanism.

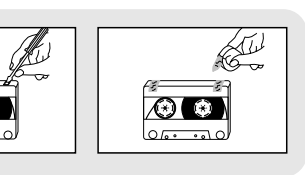

MISCELLANEOUS



Check/Remedy
and subtitles will not work for DVDs not containing ending on the disc, they may work differently.
disc that does not contain menus?
16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX AN SCAN mode, but 4:3 DVDs can be seen in 4:3 to the DVD disc jacket and then select the ction.
tion has not been selected. as not been inserted correctly. ayer has not been closed. er slack or broken.
s are dirty. ive capstans are dirty. n.
connected properly? input signal is weak, install an external FM rea with good reception.
ver and hold the <b>P.Sound</b> button on the main unit 5 seconds. function will erase all stored settings. less necessary.
is in " <b>NO DISC</b> " mode, hold the main unit's <b>TUNING</b> for longer than 5 seconds. "INITIAL" appears on the ettings will return to the default values. R button. function will erase all stored settings. less necessary.

MISCELLANEOUS

# Terminology

scs are scenes which have been simultaneously shot from different angles (the same scene is shot from the front, from the back, etc.).
button can be used to change the angle of view for the selected scene.
on DVD discs. A Title is subdivided into many chapters, numbered, and specific parts of the video can be accessed by chapter numbers.
in which high-quality pictures and sound have been recorded. Incorporating a new video compression technology, a DVD disc can contain more discs bonded together.
Modulation - another name for digital audio.
CD (version 2.0). Selected scenes or information can be displayed on the TV monitor.
D discs are encoded with a region number. A DVD disc does not correspond to the region number cannot play the disc.
bottom of the screen. A DVD disc can contain up to 99 chapters.
on DVD discs. When a disc contains two or more chapters, numbered as Title 1, Title 2, etc.
to the tracks which are recorded on video and audio tracks to be located quickly.
es and sound whose quality is roughly comparable to that of CD.
eo CDs with playback control (version 2.0).
round sound reproduced from DVDs and LDs (with <sup>16</sup> / <sub>15</sub> disc marking). With better sound quality, you can enjoy a more realistic sound than traditional Dolby surround technology, you can enjoy a more realistic sound.

MISCELLANEOUS

